


INSTRUCCIONES DE ARMADO / ASSEMBLY INSTRUCTIONS

RACK PARA TV TUNEZ 160 / TUNEZ 160 TV STAND

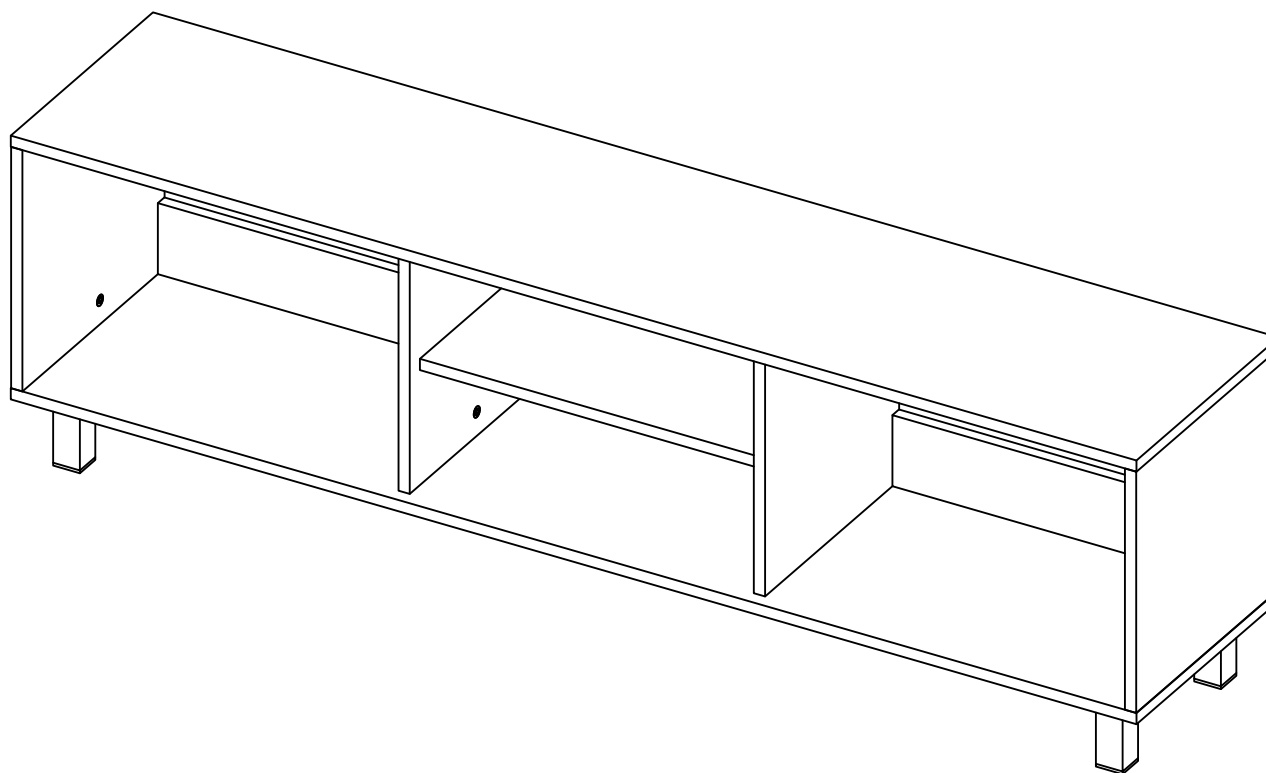

LOT N°

RTA[®]
m u e b l e s

Tel: (602) 695 9581 / 695 91 81 | EXT 118
La Nueva Estancia, Yumbo - Valle del Cauca - Colombia
www.rta.com.co

¡ATENCIÓN! / ATTENTION!


En las próximas páginas está el contenido de las piezas y herrajes del mueble. Asegúrate de que la cantidad de herrajes y piezas que hay en la caja sea la correcta y todo esté en buen estado. Ya que cuando el mueble esté armado no podrás realizar ninguna reposición.

On the next pages is the content of the pieces and hardware of the furniture. Make sure the number of hardware and parts in the box is correct and everything is in good condition. When the furniture is assembled you will not be able to make any replacement

Recomendaciones Importantes / Key Recommendations

- Ensamble el mueble entre dos personas. / Assemble the cabinet between two people.
- Ensamble el mueble sobre una superficie plana y lisa, preferiblemente sobre un tapete o el cartón de la caja. / Assemble the cabinet on a flat smooth surface, preferably on a carpeted floor or the box carton.
- Se recomienda utilizar un destornillador eléctrico para facilitar el ensamble / It is recommended to use an electric screwdriver to facilitate assembly.


Herramientas Necesarias / Required Tools



Destornillador
de estrella
Phillips Head
Screwdriver



Destornillador
de pala
Flat Head
Screwdriver

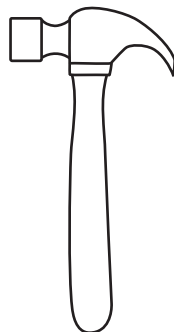


Martillo
Hammer

Herrajes Básicos / Basic Hardware

Aplica estas instrucciones cada vez que vayas a utilizar uno de estos herrajes durante el armado. / Apply these instructions everytime you're using one of these connectors during the assembly.

Tarugos / Wood Dowels

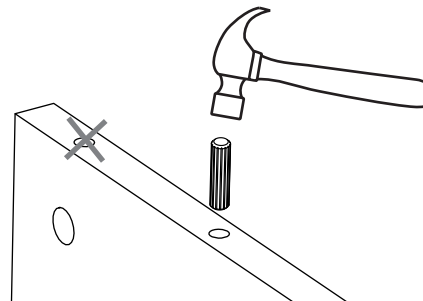


1. Inserta el tarugo en la perforación indicada y golpéalo suavemente hasta que llegue hasta el final de la perforación. / Put in the dowel inside the indicated hole and softly hit it until it's fully inside.
2. Verifica que NO se inserte el tarugo en la perforación de la caja minifix. / Verify that the dowel is NOT inserted into the perforation of the minifix cam.



Para más información
escanea AQUÍ
Scan for more info

Minifix y Pernos / Minifix Cam & Spreading Bolt





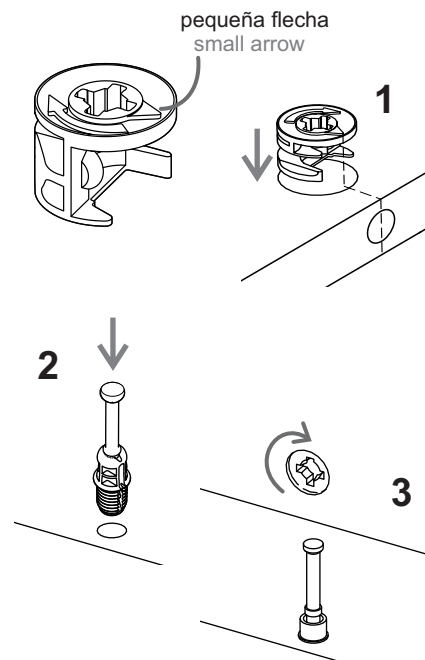


1. La caja minifix tiene una pequeña flecha en su parte superior, se debe insertar las cajas minifix con la flecha apuntando hacia la perforación que hay en el borde de la pieza. / The Minifix cam has a little arrow on its upper surface you should insert these cams with the little arrow pointing towards the drilling on the panel's edge.


2. Se debe insertar el perno con la parte plástica hacia abajo. / The spreading bolt should be put with the black plastic part facing down.

3. Luego de unir las piezas, se deben girar 180° las cajas minifix con un destornillador de estrella para ajustar y asegurar el ensamble. / After joining two panels together you should turn the cams 180° with a phillips head screwdriver to adjust and secure the joint.

Herrajes / Hardware

			
Tarugo / Wood dowel	Perno Minifix / Spreading Bolt	Caja Minifix / Minifix Cam	Tapa Minifix / Cover Caps
x22	x12	x12	x24
			
Tornillo ensamble/ Drywall screw	Tornillo Lámina / Flat Head Screw	Soporte esquinero/ Corners Union	Pata en Acero / Steel Leg
x12	x28	x4	x5

Cargas Máximas / Max Suggested Loads

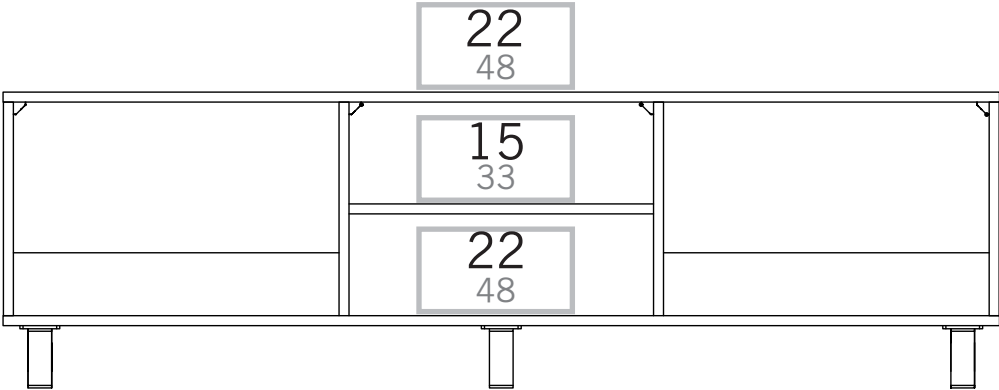


*Peso en Kg / Weight in Kg.


*Peso en Libras / Weight in Lb

Piezas de Armado / Assembly Parts


A - x1	
B - x1	
C - x1	
D - x1	
E - x1	
F - x1	
G - x1	
H - x1	
I - x1	

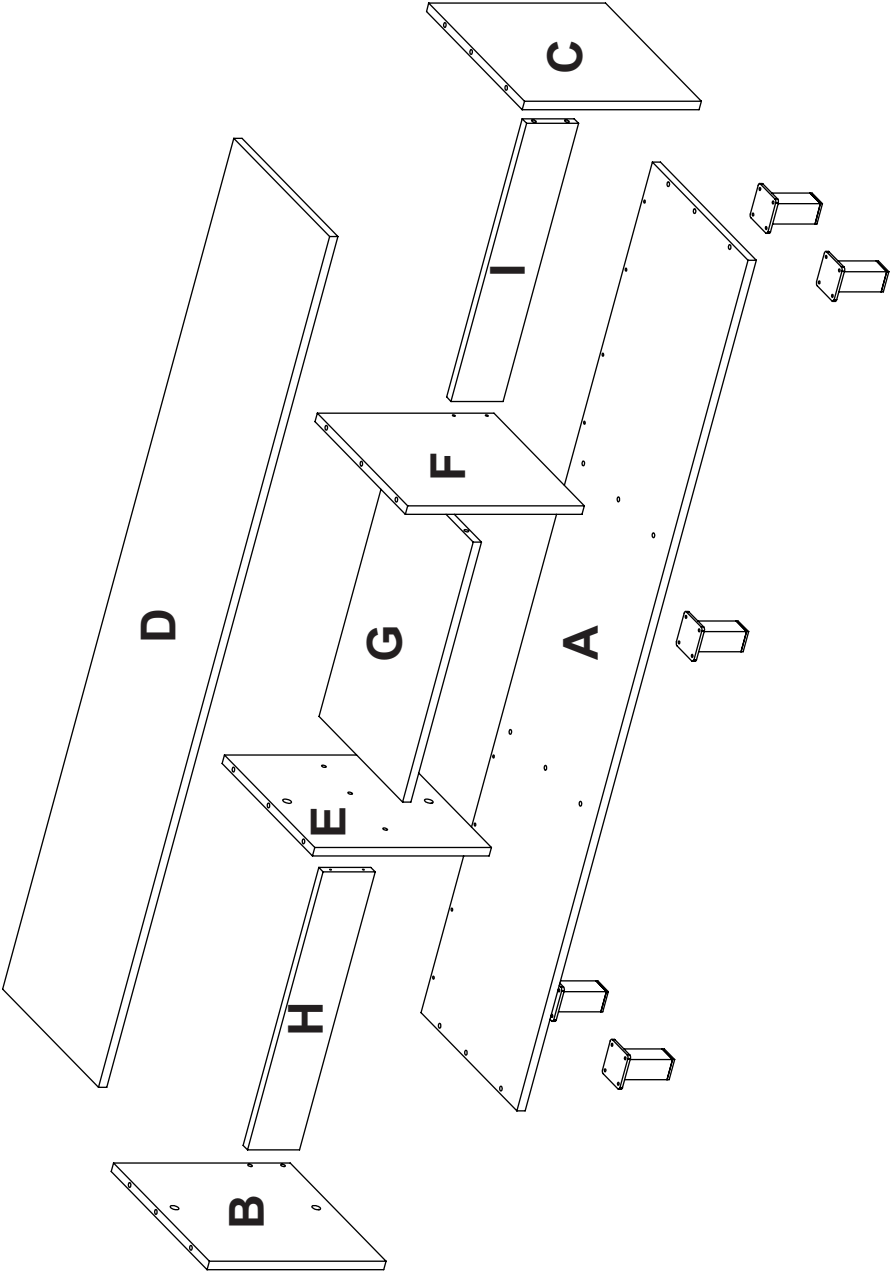


1

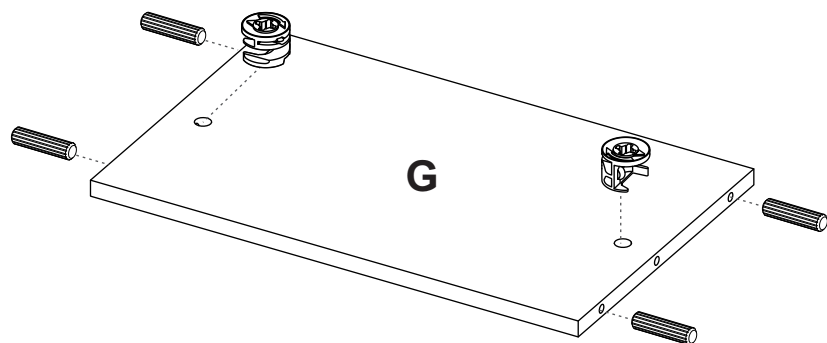


2

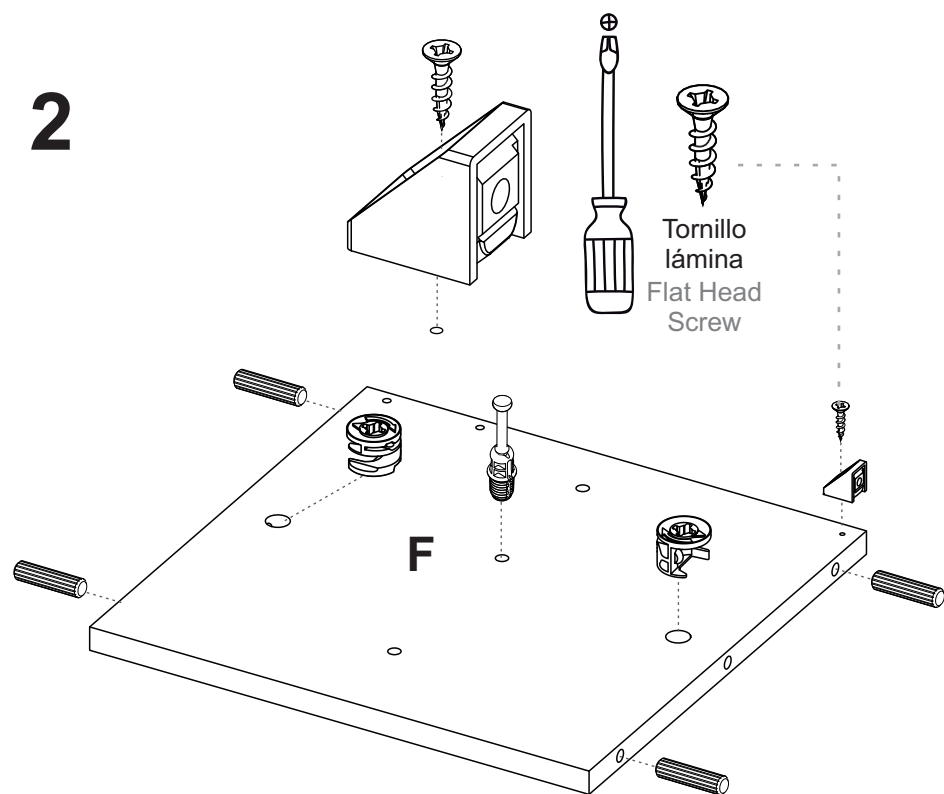


3

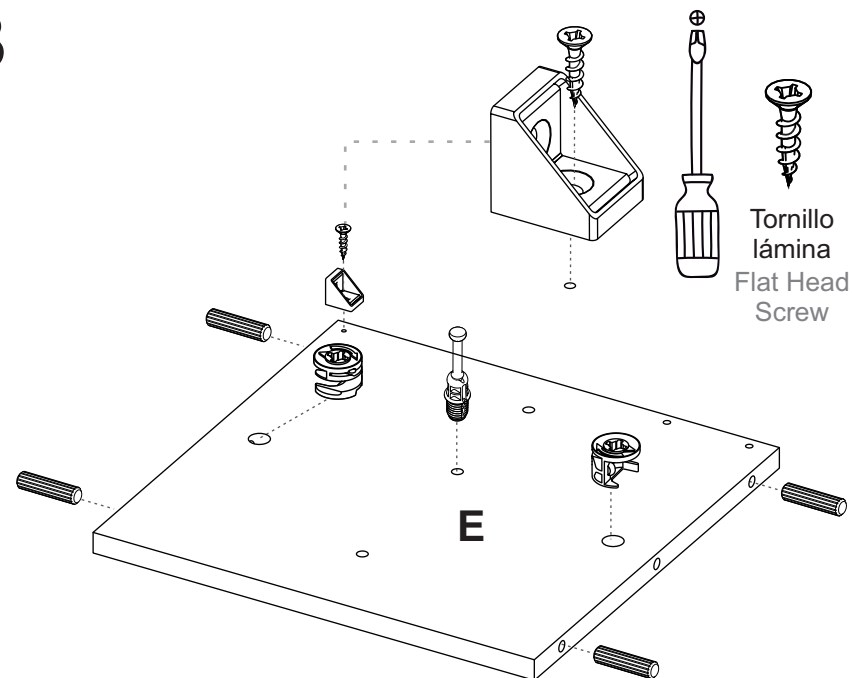


4

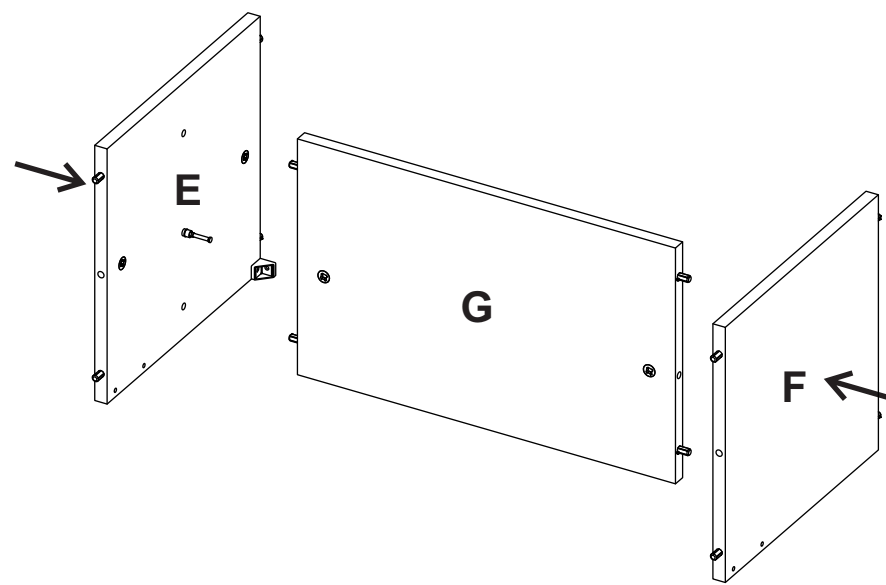


5

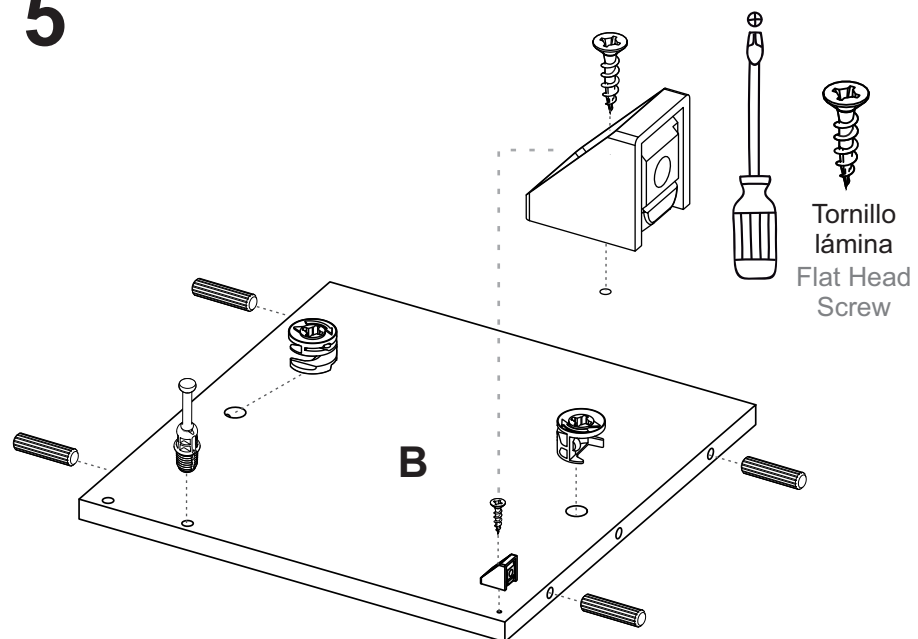


6

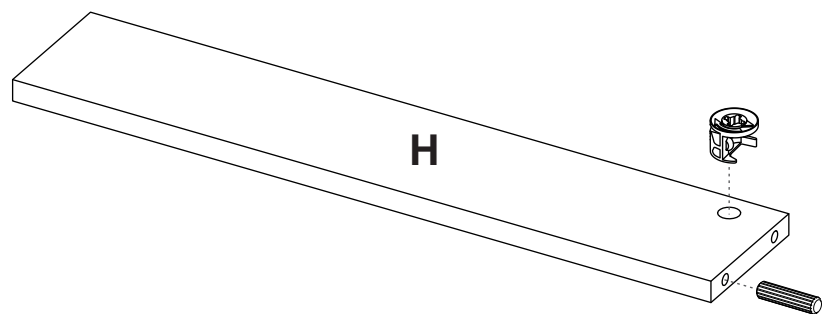


7

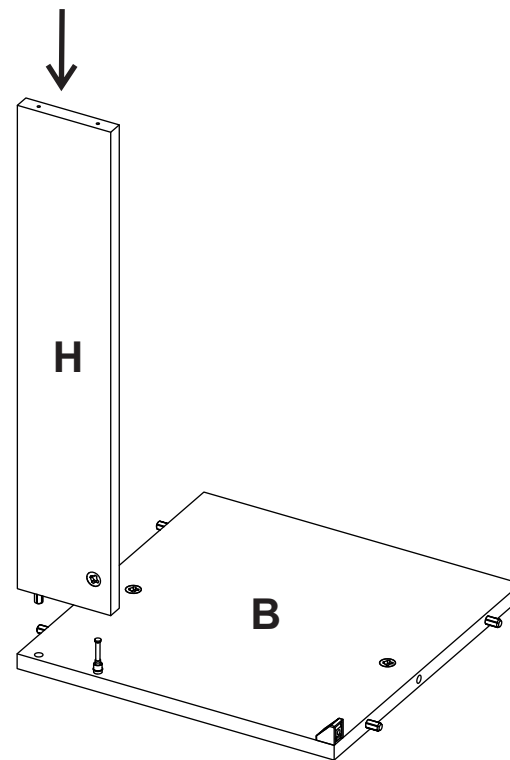


8

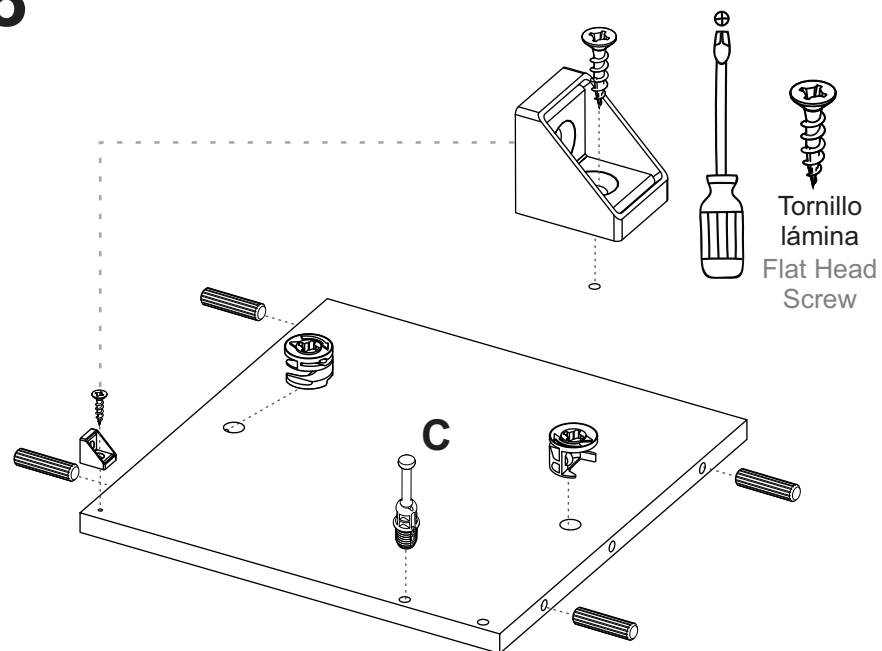


9

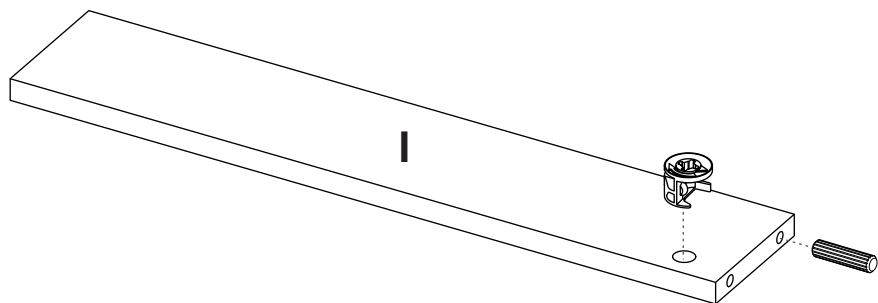

10

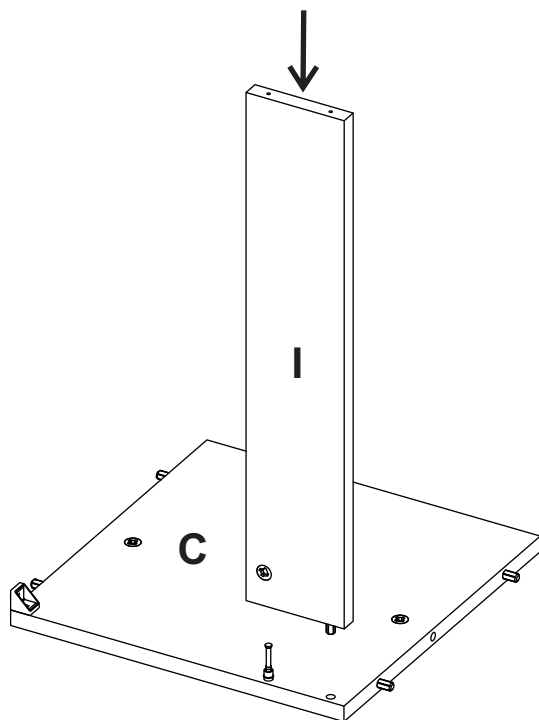


11

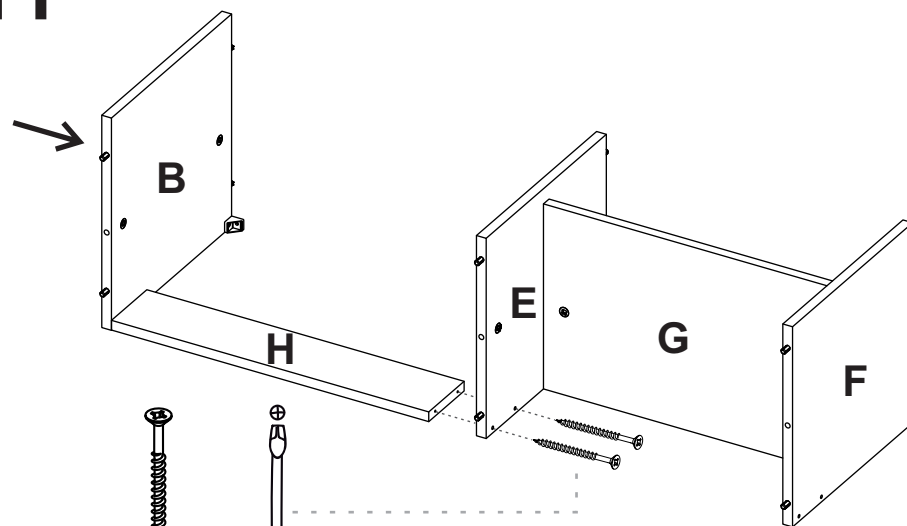

Tornillo
ensamble 2"/
Drywall screw

12

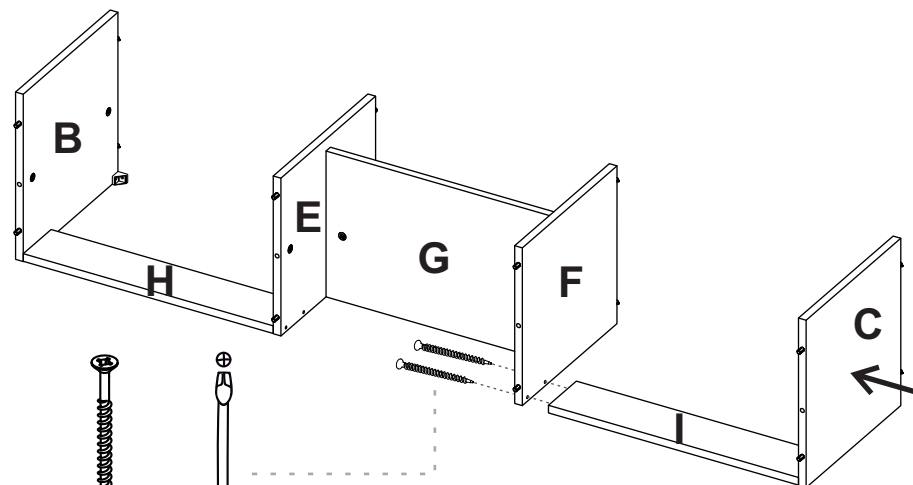

Tornillo
ensamble 2"/
Drywall screw


A diagram of a rectangular plate with four vertical rods passing through it. The rods are labeled with letters A, B, C, and D. The plate has several small dots on its surface, and the rods are shown in cross-section at the top and bottom edges.

This diagram shows an exploded view of a rectangular box assembly. The components are labeled as follows:

- B**: Left side panel.
- C**: Right side panel.
- D**: Top lid.
- E**: Left divider panel.
- F**: Right divider panel.
- G**: Bottom base.
- H**: Left bottom rail.
- I**: Right bottom rail.



Arrows indicate the assembly direction for the top lid (D) and the side panels (B and C).

Tornillo lámina
Flat Head Screw

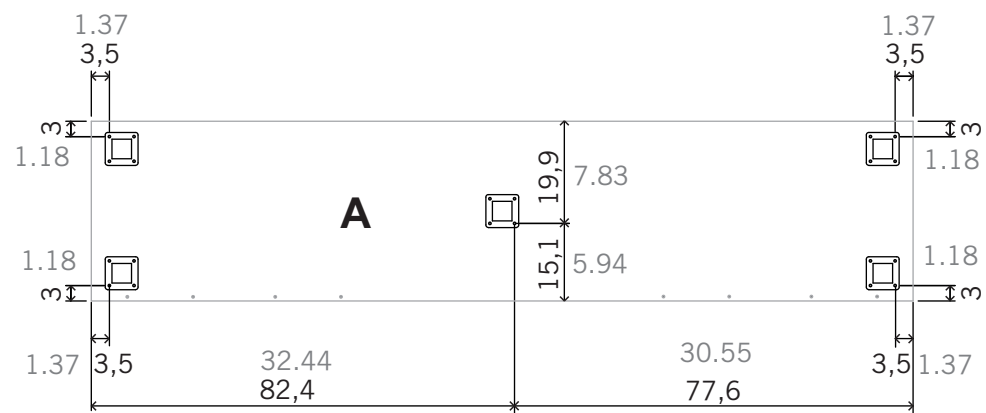


Sobre la pieza A mide los puntos indicados en el gráfico,
posiciona las patas y aseguralas con tornillos de lámina /
on piece "A" measure the points indicated in the graph,
position the legs and secure them with screws.




16

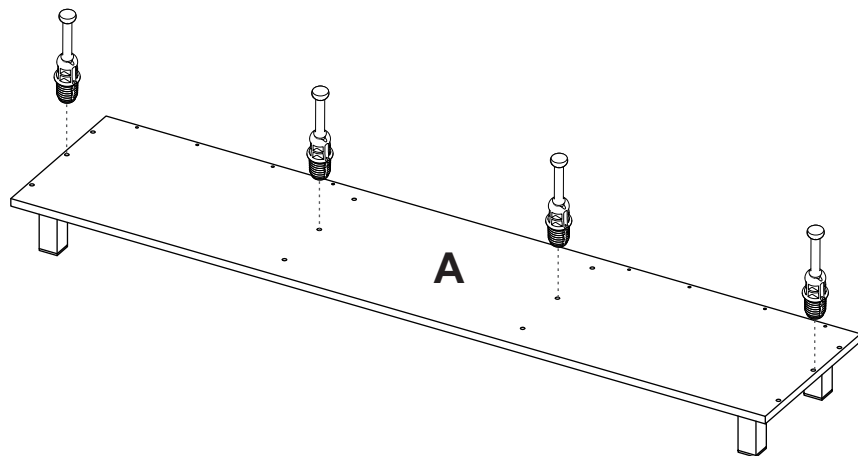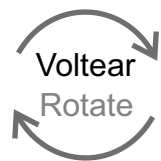

17

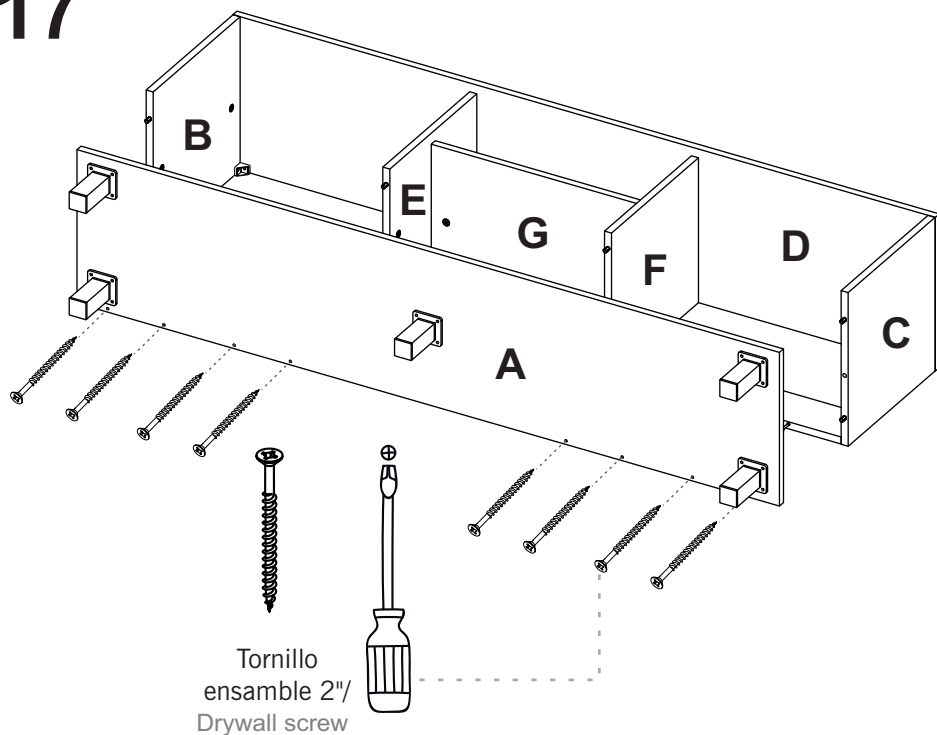

18

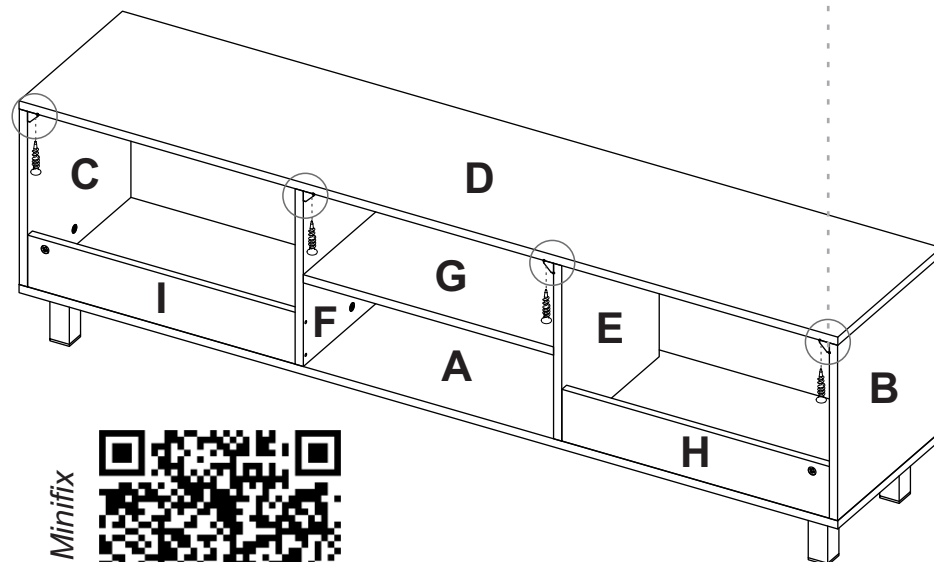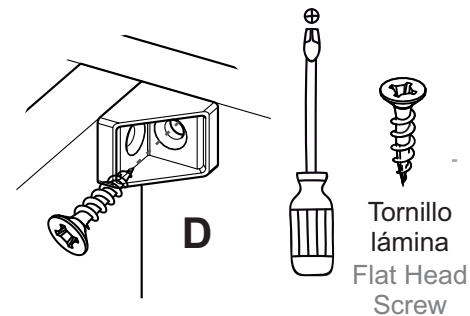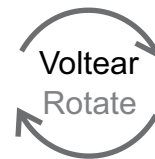

Tapas Minifix



Después de ajustar todas las cajas minifix y los tornillos, cúbralas con las tapas adhesivas.
After you finish the adjustment of the cams and screws, cover them with the cover caps.

A

Al terminar de armar, desprenda las letras adhesivas.
After you finish assembling the cabinet, take off the adhesive letters.